


FAR 3-Way DHW Valve Kit Instructions

3-Way Valve & Actuator Connection

1. Before fitting the actuator (HPKVK3), make sure that the markings on the valve body shaft correspond with the position as shown. The symbol on the right of the slot indicates the heating side of the valve.
2. The actuator should be in the position shown to allow alignment with the valve body receiver slot. It can go in either orientation as shown.

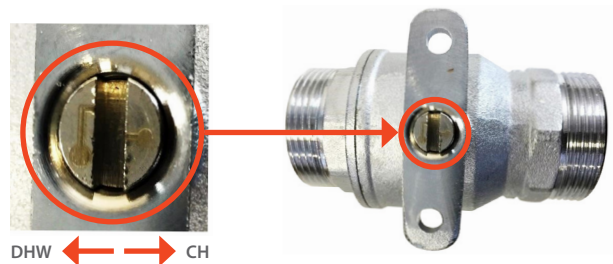

— FAR 3-Way Valve (HPKVK3)



— 3-Way Valve Actuator (HPKVK3)

Internal Terminal Board	Wiring	Description	Chofu
1. Grey	Micro switch common contact	Connected to the common contact of the micro switch	N/A*
2. White	N/O of the micro switch	Connected to the normally open contact of the micro switch	N/A
N. Blue	Neutral	Connection to neutral of the system	50
5. Brown	Phase/Live	Connection to the Phase/Live of the system	51
6. Black	Open	When Live = Valve Open	52
	Closed	Not Live = Valve Closed	

*Normally unused but can be utilised in situations where you need to run a boost pump for DHW.

3-Way Valve Diagram

