

# Korado Decorative Panel Install Guide



## Transformation in Minutes

Transform your customer's radiator in under 10 minutes with a new front panel. It fits straight onto the existing radiator with no drilling, gluing or screwing required.




Watch the video →



## Attaching the Panels

1. **Required Equipment:** Adjustable spanner, wooden board, rubber hammer, utility knife, and decorative panel. **Optional Equipment for purchase:** Side panels, thermostatic head, and/or top grill.
2. Remove the existing TRV from the radiator and place to the side.
3. Using a rubber hammer force the end panels to shuft up and out of their locked positions. Carefully remove end panels from the radiator and place to a side.
4. With the end panels removed, the grill can be removed from the radiator and place to the side.
5. Fit the supplied retaining clips over the top lip of the front radiator panel.



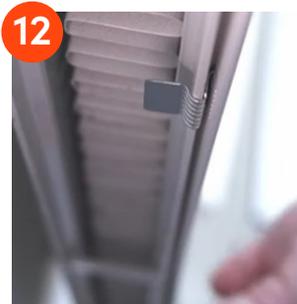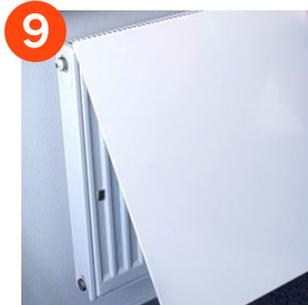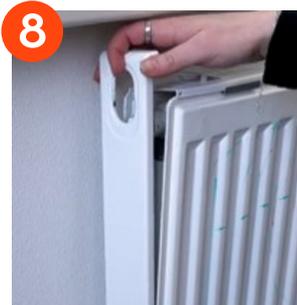

6. Space magnets at each end and in the middle of the radiator onto the front radiator panel inside the ribs.
7. Place the grill back into place on top of the radiator over the retaining clips.
8. Refit both end panels sliding down into place to lock on the grill.
9. Hand the decorative panel over the top retaining clips.
10. Adjust the decorative panel to ensure it is squarely fitted on the radiator.
11. Fit the lower retaining clips onto the lip at the bottom of the decorative panel.
12. Press the bottom of the decorative panel up against the radiator and fold the lower clips over the bottom lip of the radiator's front panel.
13. Refit the TRV to the radiator.
14. Decorative panel is now fitted and this process should take a maximum of 5 minutes to complete.

A step-by-step installation video is also available for reference, if required.

Watch the video →

